

# RUGTEK

## 2D Barcode Scanner

### Quick Start Guide



V3. 3



Enter setup

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

How to program this scanner:

- 1.Scan the "Enter setup" code
- 2.Scan the settings codes which you need
- 3.Scan the "Exit setup" code.

Setup is now complete and the scanner is ready to be used with your selected settings.

#### System settings

##### Factory default settings



Factory default settings

Note: Factory default settings are marked with an asterisk "\*" in this manual.

##### Interface



USB-KBW



USB Virtual Com



RS-232

Exit setup



Enter setup

##### Barcode types



Deactivate 1D barcode scanning



\*Activate scanning of all barcode types



Deactivate 2D barcode scanning



Activate Web QR code



\*Deactivate Web QR code

##### Reading mode



\*Manual mode



Continuous mode



Automatic mode

Exit setup



Enter setup

##### Sound



\*On



Off

##### Illumination Level



\*High



Medium



Low

##### Aiming



\*On



Off



Reading Normal

Exit setup





Enter setup

## USB-KBW Setting

### Keyboard Charactor output



\*Ctrl Char Mode



Alt + Unicode Mode

### QR Chinese output



\*Notepad, Excel



Word

### Case Conversion



Convert All to Upper Case



Convert All to Lower Case



\*Conversion

Exit setup



Enter setup



Disable Caps Lock



Enable Caps Lock

### Add terminal key stroke



\*Add terminal CR



Add terminal CR+LF



Add terminal TAB



Deactivate terminal addition

Exit setup



Enter setup

### Keyboard layout



\*USA



Russia



France



Germany



Spain



Italy



Japan



Turkey Q

Exit setup



Enter setup

## RS-232 setting

### Baud rate



\*9600



19200



38400



57600



115200



230400

Exit setup

