



## 2D Barcode Scanner

### User's Manual



V3.6



Enter setup

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

How to program this scanner:

1. Scan the "Enter setup" code
2. Scan the settings codes which you need
3. Scan the "Exit setup" code.

Setup is now complete and the scanner is ready to be used with your selected settings.

#### System settings

##### Factory default settings



Factory default settings

Note: Factory default settings are marked with an asterisk "\*" in this manual.

##### Interface



USB-KBW



USB Virtual Com



RS-232

Exit setup



Enter setup

##### Barcode types



Deactivate 1D barcode scanning



\* Activate scanning of all barcode types



Deactivate 2D barcode scanning

##### Reading mode



\* Manual mode



Continuous mode



Automatic mode

##### Sensitivity



\* High



Middle

Exit setup



Enter setup

##### Sound



Off



\* On



Low



Medium



\* High

##### Aiming



Reading Normal



Off



\* On

Exit setup





Enter setup

## USB-KBW Setting

### Keyboard Character output



\*Original data output



Transgenic output



Activate national tax ticket



Deactivate national tax ticket



GBK to Notepad



GBK to Word



\*Deactivate GBK

Exit setup



Enter setup

### Case Conversion



Convert All to Upper Case



Case interchange



Convert All to Lower Case



\*Conversion

### Add terminal key stroke



\*Add terminal CR



Add terminal CR+LF



Add terminal TAB



Deactivate terminal addition

Exit setup



Enter setup

### Keyboard layout



Russia



Germany



Sweden



Japan



Turkey F



\*USA



France



Spain



Italy



Turkey Q

Exit setup



Enter setup

### RS-232 setting

#### Baud rate



\*9600



1200



2400



4800



38400



115200



19200



57600

Exit setup

